


Surveying Guide

- A) Using a 6 foot level, make sure the brick reveals are level.
- B) Using a laser level put a metre datum line through the opening
- C) Measuring from the laser level, measure top and bottom from datum line, take these measurement as labelled C. Add these measurement and deduct for tolerance (this is for fitting) Always use the smallest measurement
- D) Using a measuring staff or tape measure, measure between the brick reveals. Once you know the measurements you will need to deduct for tolerance (this is for fitting).
- D1) Measure the internal face of the external brickwork to find the breakdown of the corner doors and deducted for tolerance (this is for fitting).

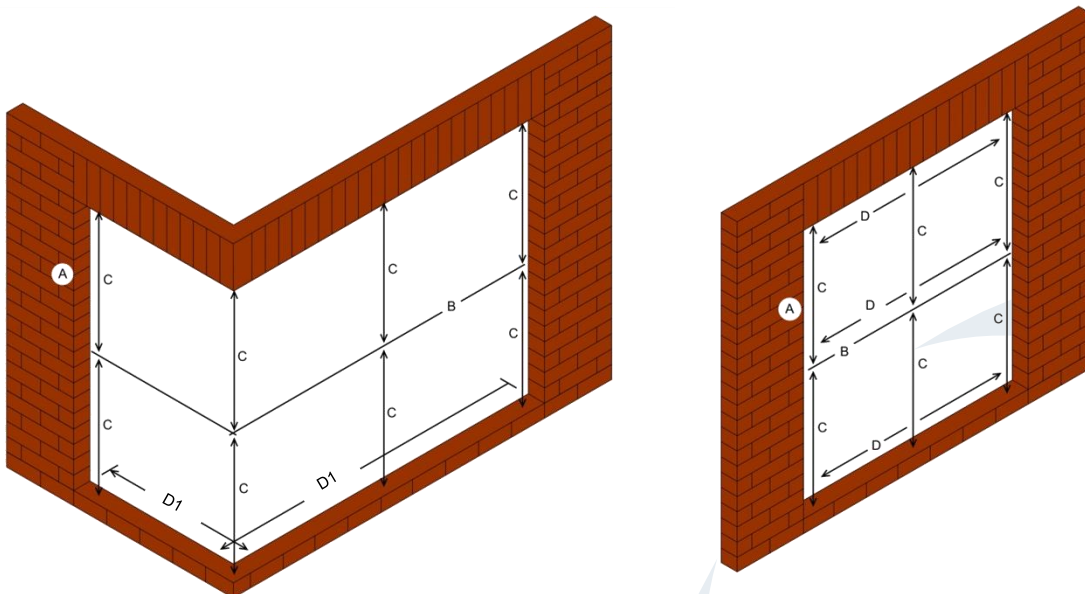

Please Note: Seek guidance from a structural engineer or local building authority for large openings or corner post with cantilevered steels.